



computer  
**emporium**

Helping YOU Use Computers More Efficiently

## **STUPID COMPUTER TRICKS**

**September 2014**

### **French Keyboard**

Have you ever been typing and your keyboard mysteriously changes to a French keyboard and instead of a question mark, you get an accented "e"?

The problem is that being Canadians when we first setup our computer, Windows created a Multilanguage keyboard option for us, and then it created a set of shortcut keys that switches the keyboard from English to French.

The default keystrokes for this shortcut is Left Shift + Left Ctrl keys pressed together, an easy to accidentally hit key sequence.

So, to change your keyboard back to English simply try pressing the Left Shift and Left Ctrl keys together.

When you have a little more time to explore go to the Control Panel, Regional Setting, Keyboard and change the shortcut key to "None"